


RX2-UNI-DW
Two Channel Standalone Receiver
with Output Wiring


Operating Voltage
Operating Current
Relay Switching Current Capacity
Frequency
Compatible Transmitters (tX)

12-30V DC/12-24V AC
9mA standby
3A Momentary/ 500mA Latching
433mhz
STX4L, STX4K, Dex4

OVERVIEW

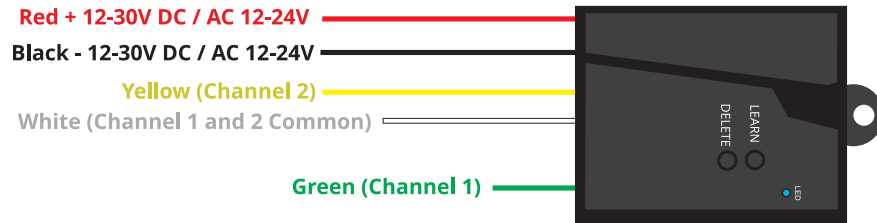

Typical Garage/Gate Connection

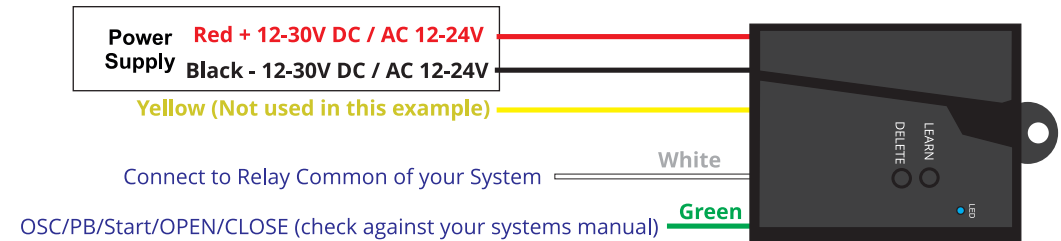

Pair the transmitters to CHANNEL 1 for Momentary Pulse

Pairing and Deleting Remotes

Remote Pairing for a Momentary Pulse

Used for garage doors, automatic gates, alarms etc.

Momentary Pulse for CH 1

1. Press **LEARN ONE TIME** and wait for the **single flash** from the LED
2. Now press the button on the transmitter you wish to use for this function.

Momentary Pulse for CH 2

1. Press **LEARN TWO TIMES** and wait for the **two flashes** from the LED
2. Now press the button on the transmitter you wish to use for this function.

Remote Pairing for a Latching Circuit

Used for breaking circuits and turning on/off devices.

Latching Circuit for CH 1

1. Press **LEARN THREE TIMES** and wait for the **three flashes** from the LED
2. Now press the button on the transmitter you wish to use for this function.

Latching Circuit for CH 2

1. Press **LEARN FOUR TIMES** and wait for the **four flashes** from the LED
2. Now press the button on the transmitter you wish to use for this function.

Deleting ONE specific transmitter

1. Press and HOLD **DELETE** for 5 Seconds.
2. Upon releasing the LED will turn on
3. Press the transmitter button you wish to delete

Deleting ALL transmitters (Full Format)

Press and **DELETE** for 20 Seconds, the LED will turn ON. Release **DELETE** button, all transmitters will be deleted.